



General concept

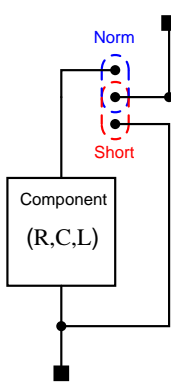

Actual layout

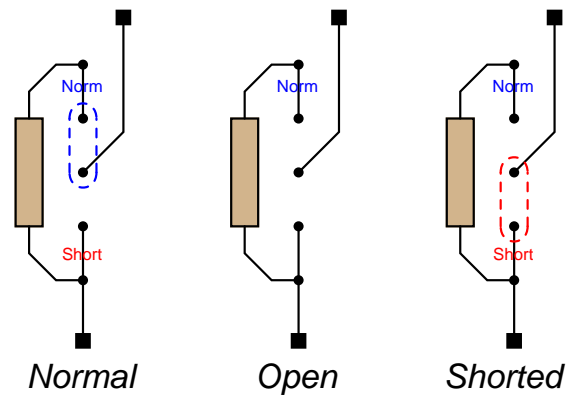

Placing jumper between upper two header pins makes the component behave normally. Placing jumper between lower two header pins emulates a shorted component. Removing jumper entirely emulates an open component.